

Dobór przełożeń

i		025/030	025/040	030/040	030/050	030/063	040/075	040/090	050/110	063/130	
75	i ₁						7,5				
	i ₂						10				
100	i ₁						10				
	i ₂						10				
150	i ₁						10				
	i ₂						15				
200	i ₁						10				
	i ₂						20				
250	i ₁						10				
	i ₂						25				
300	i ₁	10	10	10	10	7,5	10	7,5	10	10	
	i ₂	30	30	30	30	40	30	40	30	30	
400	i ₁						10				
	i ₂						40				
500	i ₁	20	20	20	10	10	10	10	10	10	
	i ₂	25	25	25	50	50	50	50	50	50	
600	i ₁	20	20	20	20	15	20	15	15	15	
	i ₂	30	30	30	30	40	30	40	40	40	
750	i ₁	25	25	25	25	15	25	15	25	25	
	i ₂	30	30	30	30	50	30	50	30	30	
900	i ₁	30	30	30	30	15	30	15	30	30	
	i ₂	30	30	30	30	60	30	60	30	30	
1200	i ₁						30				
	i ₂						40				
1500	i ₁						50				
	i ₂						30				
1800	i ₁	60	60	60	60	30	60	60	60	60	
	i ₂	30	30	30	30	60	30	30	30	30	
2400	i ₁						60				
	i ₂						40				
3000	i ₁						60				
	i ₂						50				

Pozycje montażowe

